

Q7

Manual (2.5 EN)

Symbols on the equipment



Please refer to the information in the operating manual.



WARNING!
Dangerous voltage!

Contents

Safety precautions.....	3
Information regarding use of loudspeakers.....	3
Q7	4
Connections.....	4
Operation.....	5
Operation with E-PAC.....	6
Dispersion characteristics.....	6
Technical specifications.....	7
Altering the HF horn dispersion.....	8
Arraying Q7 cabinets.....	8
Manufacturer's declarations.....	9
EU conformity of loudspeakers (CE symbol).....	9
WEEE Declaration (Disposal).....	9

General Information

Q7 Manual

Version 2.5 EN, 10/2017, D2041.E.02

Copyright © 2017 by d&b audiotechnik GmbH; all rights reserved.

Keep this manual with the product or in a safe place so that it is available for future reference.

When reselling this product, hand over this manual to the new customer.

If you supply d&b products, please draw the attention of your customers to this manual. Enclose the relevant manuals with the systems. If you require additional manuals for this purpose, you can order them from d&b.

d&b audiotechnik GmbH
Eugen-Adolff-Strasse 134, D-71522 Backnang, Germany
Telephone +49-7191-9669-0, Fax +49-7191-95 00 00
E-mail: docadmin@dbaudio.com, Internet: www.dbaudio.com

Safety precautions



WARNING!

Information regarding use of loudspeakers

Never stand in the immediate vicinity of loudspeakers driven at a high level. Professional loudspeaker systems are capable of causing a sound pressure level detrimental to human health. Seemingly non-critical sound levels (from approx. 95 dB-SPL) can cause hearing damage if people are exposed to it over a long period.

In order to prevent accidents when deploying loudspeakers on the ground or when flown, please take note of the following:

When setting up the loudspeakers or loudspeaker stands, make sure they are standing on a firm surface. If you place several systems on top of one another, use straps to secure them against movement.

Only use accessories which have been tested and approved by d&b for assembly and mobile deployment. Pay attention to the correct application and maximum load capacity of the accessories as detailed in our specific "Mounting instructions" or in our "Flying system and Rigging manuals".

Ensure that all additional hardware, fixings and fasteners used for installation or mobile deployment are of an appropriate size and load safety factor. Pay attention to the manufacturers' instructions and to the relevant safety guidelines.

Regularly check the loudspeaker housings and accessories for visible signs of wear and tear, and replace them when necessary.

Regularly check all load bearing bolts in the mounting devices.

CAUTION!

Loudspeakers produce a static magnetic field even if they are not connected or are not in use. Therefore make sure when erecting and transporting loudspeakers that they are nowhere near equipment and objects which may be impaired or damaged by an external magnetic field. Generally speaking, a distance of 0.5 m (1.5 ft) from magnetic data carriers (floppy disks, audio and video tapes, bank cards, etc.) is sufficient; a distance of more than 1 m (3 ft) may be necessary with computer and video monitors.

Q7

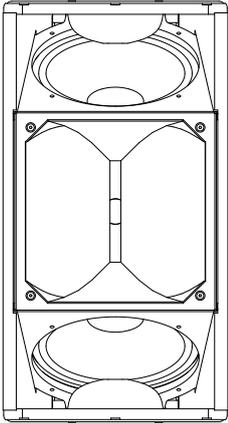


Fig. 1: Q7 loudspeaker

The Q7 is a 75° x 40° passive two-way loudspeaker. It houses 2 x 10" LF drivers and a 1.3" HF compression driver with a rotatable CD horn and a passive crossover network. Its frequency response extends from 60 Hz to above 17 kHz. The two 10" neodymium LF drivers are positioned in a dipolar arrangement providing exceptional vertical dispersion control even at lower frequencies.

The Q7 cabinet is constructed from marine plywood and has an impact resistant paint finish. The front of the loudspeaker cabinet is protected by a rigid metal grill, covered with a replaceable acoustically transparent foam. The cabinet incorporates a pair of handles.

The Q7 cabinet is fitted with four types of rigging devices:

- Eight sockets in the front grill and rear edge bar that accept the Z5153 Locking pins 8 mm to connect the array links.
- A quick lock adapter plate on one side of the cabinet that accepts the Z5150 Q Swivel bracket or the Z5156 Q Flying adapter.
- Five sockets that accept the Z5048 Flying pin 10 mm to support single cabinets and to secure the aiming of an array.
- Four M10 threaded inserts to accept the Z5020 Flying adapter 02, Z5025 Flying adapter 03 or Z5043 MAX Horizontal bracket.

NOTICE:

Only operate Q7 loudspeakers with a correctly configured d&b amplifier, otherwise there is a risk of damaging the loudspeaker components.

Connections

The Q7 cabinet is fitted with a pair of EP5 connectors. All five pins of both connectors are wired in parallel. The Q7 uses the pin assignments 1/2. Pins 3/4 and 5 are designated to Q-SUB active subwoofers, where pin 5 is used for SenseDrive (only available when using a D12 amplifier and 5-wire cabling). Using the male connector as the input, the female connector allows for direct connection to additional loudspeakers.

The Q7 can be supplied with NL4 output connectors as an option. Pin equivalents of EP5 and NL4 connectors are listed in the table below.

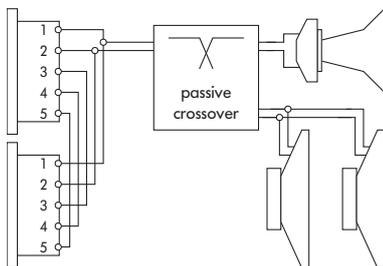


Fig. 2: Connector wiring

EP5	1	2	3	4	5
NL4	1+	1-	2+	2-	n.a.

Operation

NOTICE!

Only operate d&b loudspeakers with a correctly configured d&b amplifier, otherwise there is a risk of damaging the loudspeaker components.

Applicable d&b amplifiers:

D80/D20/D12/D6/10D/30D.

Application	Setup	Cabinets per channel
Q7	Q7	2

For applicable d&b amplifiers the setups are available in Dual Channel or Mix TOP/SUB mode.

Controller settings

For acoustic adjustment the functions CUT, HFA and CPL can be selected.

CUT circuit

Set to CUT, the Q7 low frequency level is reduced. The Q7 is now configured for use with the Q-SUB or d&b C-Series subwoofers.

HFA circuit

In HFA mode (High Frequency Attenuation), the HF response of the Q7 system is rolled off. The HFA circuit provides a natural, balanced frequency response when a unit is placed close to listeners in near field or delay use.

High frequency attenuation begins gradually at 1 kHz, dropping by approximately 3 dB at 10 kHz. This roll-off mimics the decline in frequency response experienced when listening to a system from a distance in a typically reverberant room or auditorium.

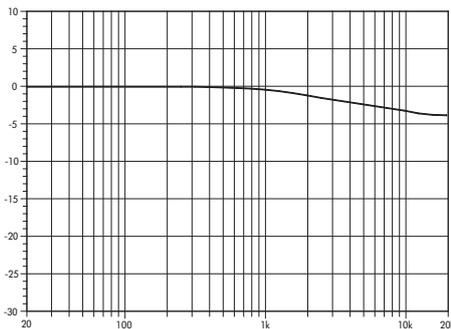


Fig. 3: Frequency response correction of HFA circuit



Fig. 4: Frequency response correction of CPL circuit

CPL circuit

The CPL (Coupling) circuit compensates for coupling effects between the cabinets when building closely coupled arrays. CPL begins gradually at 1 kHz, with maximum attenuation below 400 Hz, providing a balanced frequency response when Q7 cabinets are used in arrays of two or more. The function of the CPL circuit is shown in the diagram opposite and can be set in dB attenuation values between -9 and 0, or a positive CPL value which creates an adjustable low frequency boost around 65 Hz (0 to +5 dB).

Operation with E-PAC

Selecting Q7 mode enables the E-PAC to drive one Q7 loudspeaker. LO IMP mode configures the E-PAC to drive a maximum of two Q7 loudspeakers with a 6 dB reduction in input level to the loudspeakers.

For acoustic adjustment the functions CUT and CPL can be selected. The characteristics of the CUT and CPL settings are explained in the previous section "Operation with D6 or D12 - Controller settings".

The E-PAC CPL circuit creates a 3 dB attenuation corresponding with the -3 dB curve shown in Fig. 4.

Dispersion characteristics

The graphs below show dispersion angle over frequency of a single Q7 cabinet plotted using lines of equal sound pressure (isobars) at -6 dB and -12 dB.

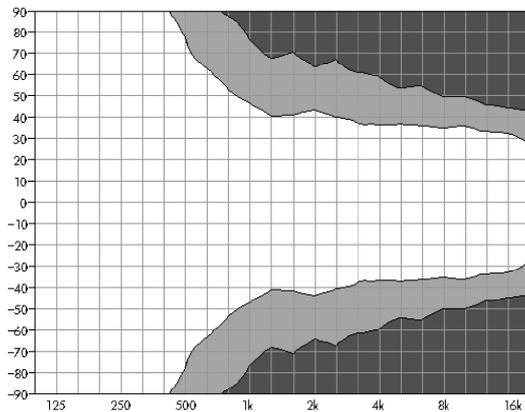


Fig. 5: Isobar diagram Q7 horizontal, standard set up

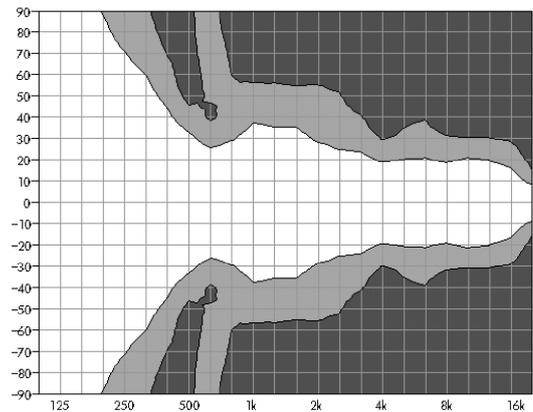


Fig. 6: Isobar diagram Q7 vertical, standard set up

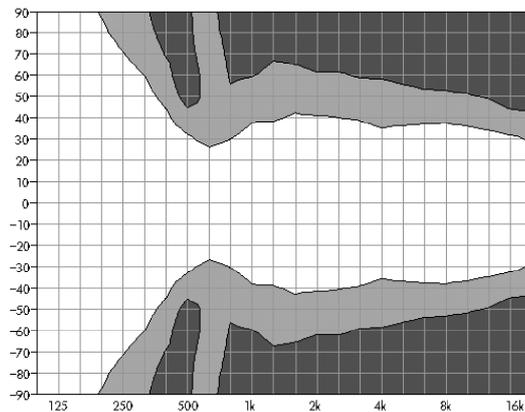


Fig. 7: Isobar diagram Q7 horizontal, horizontal set up with the horn rotated

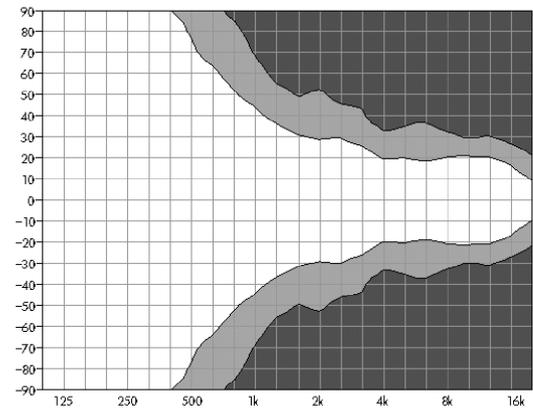


Fig. 8: Isobar diagram Q7 vertical, horizontal set up with the horn rotated

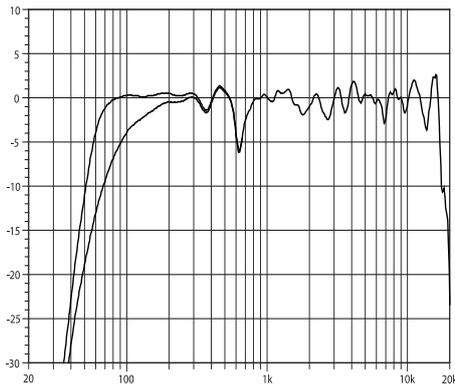


Fig. 9: Q7 frequency response, standard and CUT settings

Technical specifications

Q7 system data

Frequency response (-5 dB standard).....	60 Hz ... 17 kHz
Frequency response (-5 dB CUT mode).....	100 Hz ... 17 kHz
Max. sound pressure (single cabinet, 1 m, free field) with	
D80/D20/D12/30D.....	138 dB
D6/10D/E-PAC.....	134 dB
	(SPLmax peak, pink noise test signal with crest factor of 4)

Q7 loudspeaker

Nominal impedance.....	8 ohms
Power handling capacity (RMS / peak 10 ms).....	400/1600 W
Nominal dispersion angle (hor. x vert.).....	75° x 40°
Components.....	2 x 10" driver
	1.3" compression driver
	Passive crossover network
Connections.....	2 x EP5
	(optional 2 x NL4)
Pin assignments.....	EP5: 1/2
	NL4: 1+/1-
Weight.....	22 kg (49 lb)

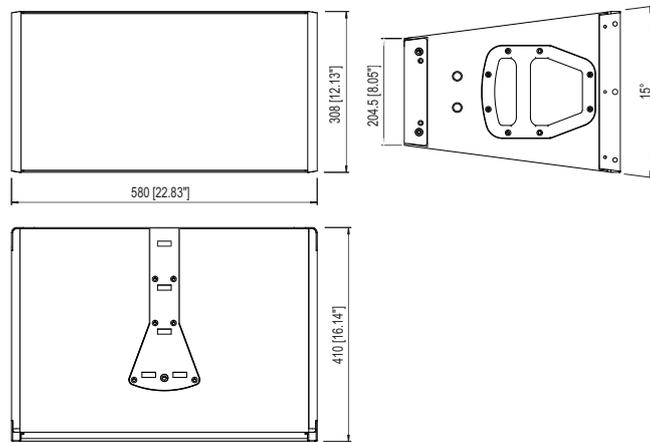


Fig. 10: Q7 cabinet dimensions in mm [inch]

Altering the HF horn dispersion

The Q7 HF horn has a square flange allowing it to rotate through 90°. It can easily be accessed through an aperture in the front grill.



CAUTION !

Potential risk of personal injury due to falling objects.

The HF horn of the Q7 cabinets up to serial No.:

Z050700000374 with EP5 connectors

Z050700000217 with NL4 connectors

is not equipped with a safety wire against falling out.

- Ensure that all four self-locking screws are replaced and properly tightened. Otherwise there is a risk of the horn and the driver falling out of the front of the cabinet.
- Before setting up Q7 loudspeakers always ensure that the horn is mounted correctly.

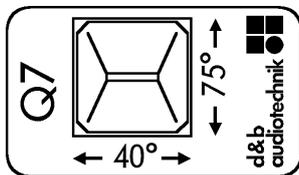


Fig. 11: Q7 horn dispersion label

Tools required: 3 mm Allen key (Torque wrench).

1. Undo the four countersunk Allen screws of the horn.
2. Rotate the horn through 90° - Fig. 11.
3. Refit the horn and tighten the four screws of the horn to a torque of 2 Nm.

Arraying Q7 cabinets

Horizontal array of Q7 cabinets

The horizontal angle between adjacent Q7 cabinets can be set to between 40° and 60°. The most even energy distribution is achieved with 50°.

Vertical array of Q7 cabinets

The vertical angle between adjacent Q7 cabinets can be set to between 20° and 40°. The most even energy distribution is achieved with 35°. Smaller angles between the cabinets will give a smaller coverage area but will produce higher sound pressure on the center axis of the array.

Q7 used in line array columns with Q1s and Q-SUBs

The Q7 with the horn rotated can be positioned at the bottom of a Q1 line array column to extend the near field coverage horizontally and vertically, if required. When the standard Q1 array links are used to connect the Q7 cabinet the splay should be set to a maximum of 14°.

Manufacturer's declarations



EU conformity of loudspeakers (CE symbol)

This declaration applies to

- **Q7 loudspeaker Z0507**

manufactured by d&b audiotechnik GmbH.

All production versions of this type are included, provided they correspond to the original technical version and have not been subject to any later design or electromechanical modifications.

We herewith declare that said products are in conformity with the provisions of the respective EC directives including all applicable amendments.

A detailed declaration is available on request and can be ordered from d&b or downloaded from the d&b website at www.dbaudio.com.

WEEE Declaration (Disposal)

Electrical and electronic equipment must be disposed of separately from normal waste at the end of its operational lifetime.

Please dispose of this product according to the respective national regulations or contractual agreements. If there are any further questions concerning the disposal of this product please contact d&b audiotechnik.

